

SAMSUNG

QUICK START GUIDE

S9C



BN68-05357A-03

Attach the TV to
the Stand

Step 1

Connect video
devices

Step 2

Using the Smart
Touch Control

 
Step 3

Power on and
start the initial
setup

Step 4



Warning: Screens can be damaged from direct pressure when handled incorrectly. We recommend lifting the TV by the edges, as shown.

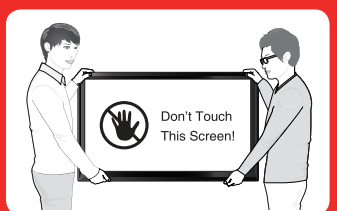

Welcome to your new Smart TV!

The following instructions cover assembling, connecting, and setting up your new TV. Make sure you have the accessories listed below.

Included in this box

Remote Control



Smart Touch Control



Batteries (AAA x 4)



Remote Control

One connect and Cables



Power cord



IR extender



RCA adapter x 2



Component adapter



One connect

 


One connect cable

Also included: User manual, 3D active glasses

Step 1 Attach the TV to the Stand

1A

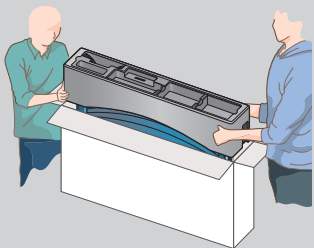

Open the package, and remove the cushioning.

 
REQUIRED TOOLS: a Phillips head screwdriver and a soft, flat surface larger than the TV (such as the box).

1C



Remove the TV from the box. Then, remove the top and bottom pieces of Styrofoam from the TV, but keep the screen-protection piece on. Place the TV down on the the box with the screen facing down.


1B

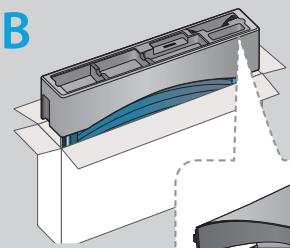

Pull the stand out of the top Styrofoam cushioning, and make the stand face your body, as shown in the illustration. Insert a finger into the groove in the middle and pull it up to separate the cover from the stand.




 Stand


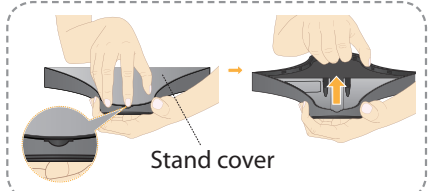
Screws
M4 x L20 4 pieces
M4 x L10 2 pieces

Stand cover

 1D

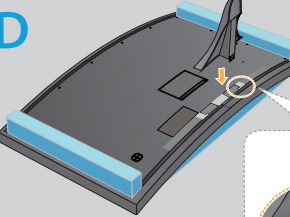


  Tilt the stand to put its hook into the groove on the back of the TV, and push it, giving it a slight turn until it is firmly in place.

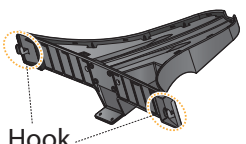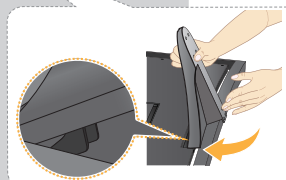


Hook

 1E

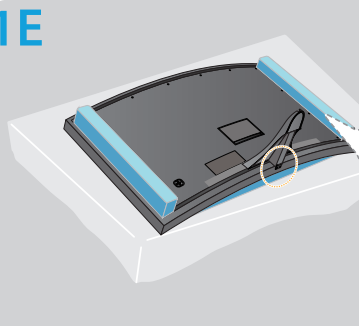


 Secure the bottom of the stand to the TV using two screws.

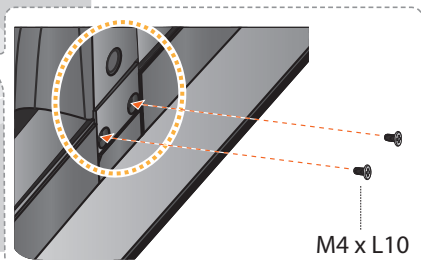


M4 x L10

 1F

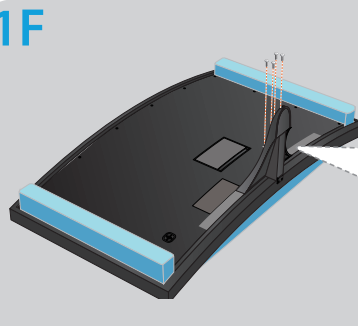


 Secure the stand to the TV using four screws as shown in the diagram.

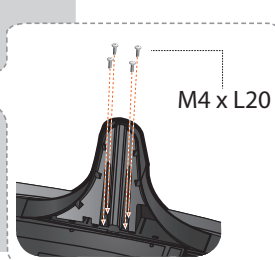


M4 x L20

 1G

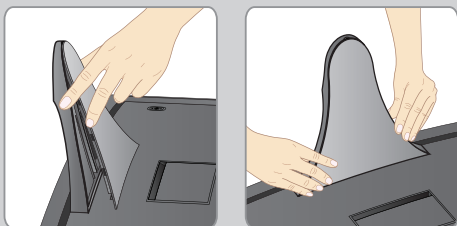


To replace the stand cover, fix its exterior and then the interior into the stand. Press both sides firmly to make sure that it is completely assembled.

 1H

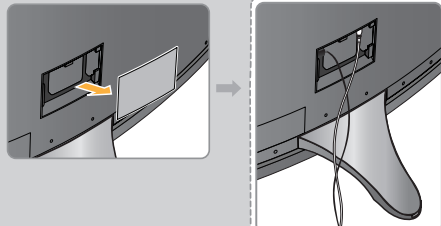


Remove the port cover, and connect the power cord to the One Connect.

 1I

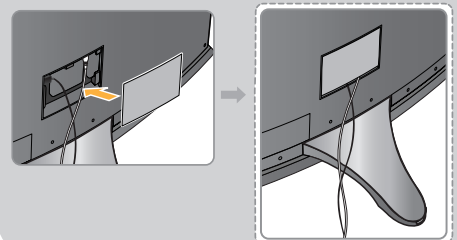


Replace the port cover.

 1J

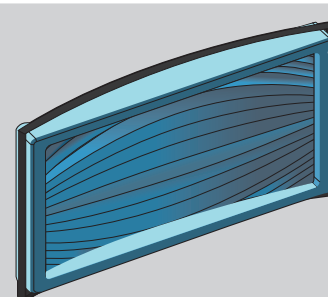

 Stand the TV up, and remove the Styrofoam bumper and the 4 protective pads from the screen.

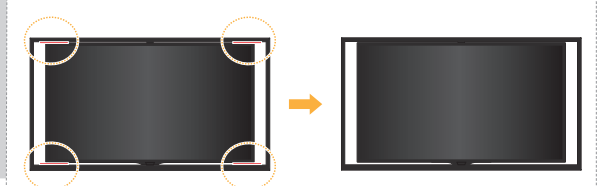


Step 2 Connect video devices

We suggest using HDMI connections whenever possible for the best picture quality. Use the included AV adapter to connect older devices.

- Please check the shape of the plugs to avoid inserting them upside down.
- The appearance of your TV may differ from the images below, depending on the model.

 You can connect home theater systems to the OPTICAL or AUDIO OUT ports.

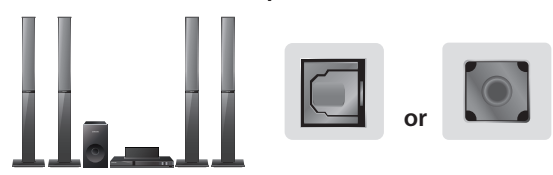


Best Connection : HDMI

We suggest using HDMI whenever possible.

 
HDMI 1 is the default port for a cable or satellite set-top box.

Use the other ports for Blu-ray players, game consoles, and other devices.


HDMI Cable



HDMI Port





Wired Ethernet

 

  
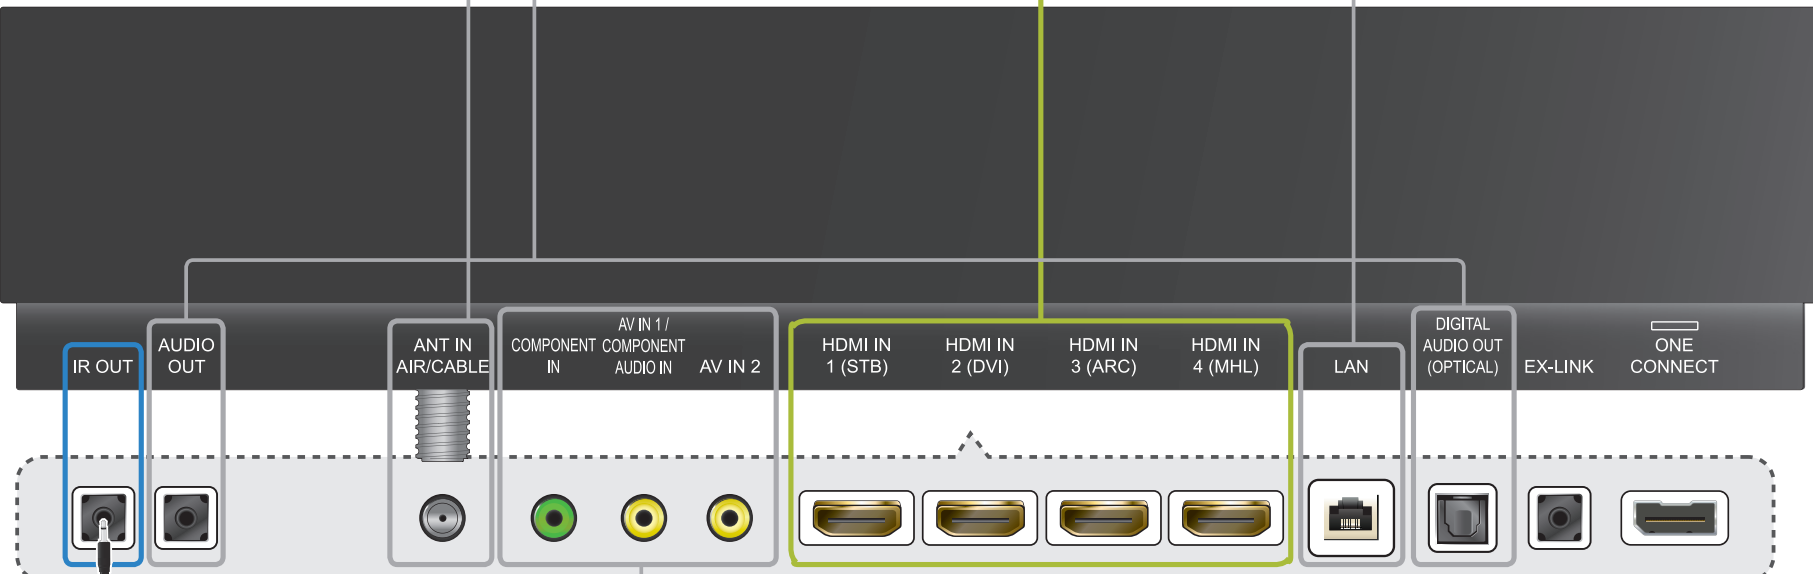 
USB Connections

You can connect USB storage devices to the USB ports and enjoy personal photos, videos, and music.

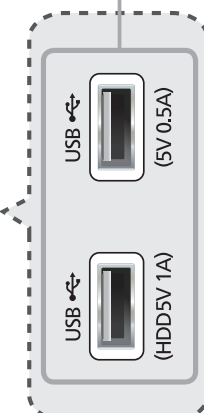 


Connect the cable from the antenna or cable TV outlet.







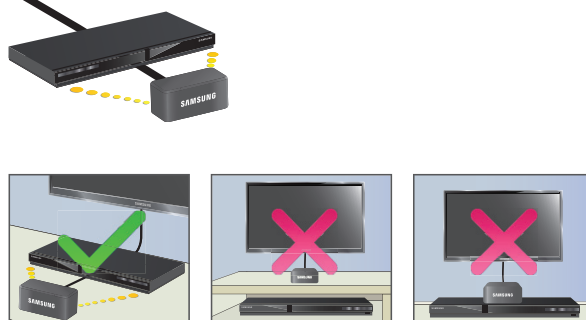






 
Connect the IR extender to the IR Out port to control external devices connected to the TV using the Smart Touch Control. For more detailed information, refer to the "Universal Remote Control Setup" section in the User manual.



Good Connection: Component (Y, PB, PR) or AV (Composite)

Match the colors on your device's cables to the colors on the device's out ports. Connect the device's cables to the included adapters, and then connect the adapters to the appropriate ports on the TV as shown in the table below. Make sure the colors match. The Component connection is shown on the top. The AV connection is shown on the bottom.

AV IN 1				Audio (L/R)
COMPONENT IN				Video
AV IN 2				Audio (L/R)
				Video

Step 3 Using the Smart Touch Control

 
 
 
Insert the batteries into the Smart Touch Control

Insert the tip of a credit card or similar item into the notch on the side of the Smart Touch Control, and then twist the card to open and remove the remote's back cover.



The notch's location may vary depending on the type of Smart Touch Control provided.

Using the touch pad
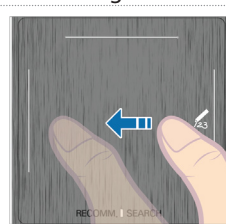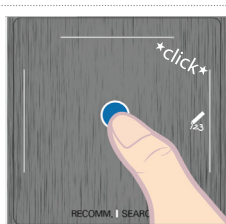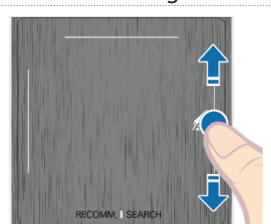
<p>navigation</p> 	<p>selection</p> 	<p>scrolling</p> 
To control the highlight, move your thumb across the pad.	To select an item, press the pad until you hear a click.	Move your thumb along the ridges to quickly scroll through items.

Pairing the Smart Touch Control

If you need to reestablish the connection between the TV and the Smart Touch Control, press the pairing button at the back of the Smart Touch Control, pointing at the remote control sensor of the TV.

Congratulations on your new Smart TV!

Step 4 Power on and start the initial setup

Information required:

- Wi-Fi network password (if you use one)
- Zip code
- Cable or satellite provider info

Plug in the TV. Press the power button on the remote to turn on the TV and start the initial setup.

The TV must be connected to the Internet to use the Smart Features. If you have a wireless network, confirm that your network router is working before you start the initial setup. If you have a wired network, connect the TV to the network with a CAT 7 cable before you begin.

Troubleshooting

The stand is wobbly or crooked

Make sure the arrows on the stand are properly aligned.

The TV won't turn on

 
Make sure all cables are fully inserted, and that the remote has batteries installed.

I don't know where to plug in <device>

Devices without HDMI may require the included A/V adapter.

I have extra parts

The TV includes some optional parts to help with wall mounting and cable routing.

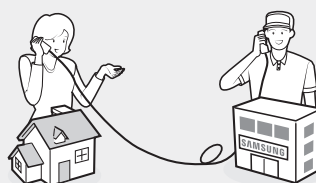

If you experience issues, please do not take the TV back to the store.

In the United States of America, call us at 1-800-SAMSUNG (1-800-726-7864) or visit us at www.samsung.com or www.samsung.com/spsn for support and warranty service.

For other countries, refer to "Contact SAMSUNG WORLDWIDE" in the user guide.